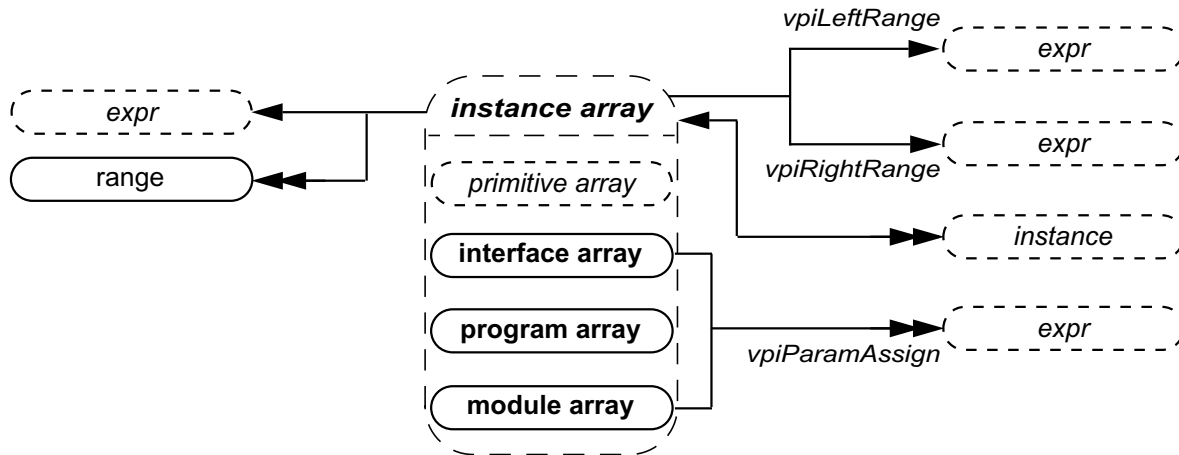
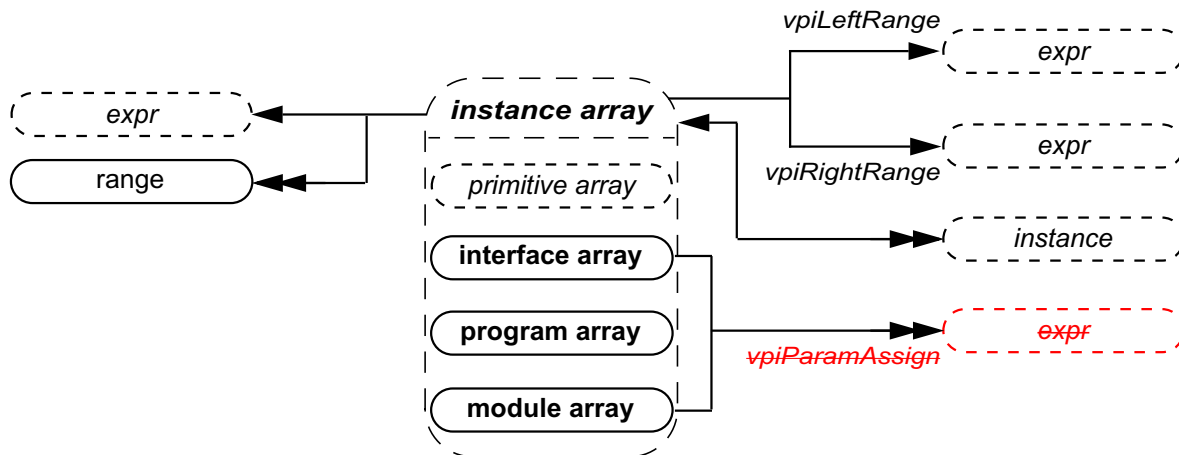


REPLACE**32.8 Instance arrays (supersedes P1364 26.6.2)****NOTES:**


- 1) Param assignments can only be obtained from non-primitive instance arrays.
- 2) To obtain all the dimensions of a multidimensional array, the range iterator must be used. Using the **vpiLeftRange/vpiRightRange** properties only returns the last dimension of a multidimensional array.

DELETE THE FOLLOWING**32.8 Instance arrays (supersedes P1364 26.6.2)****NOTES:**

- ~~1) Param assignments can only be obtained from non-primitive instance arrays.~~
- 2) To obtain all the dimensions of a multidimensional array, the range iterator must be used. Using the **vpiLeftRange/vpiRightRange** properties only returns the last dimension of a multidimensional array.

THEN ADD THE FOLLOWING:

32.8 Instance arrays (supersedes P1364 26.6.2)

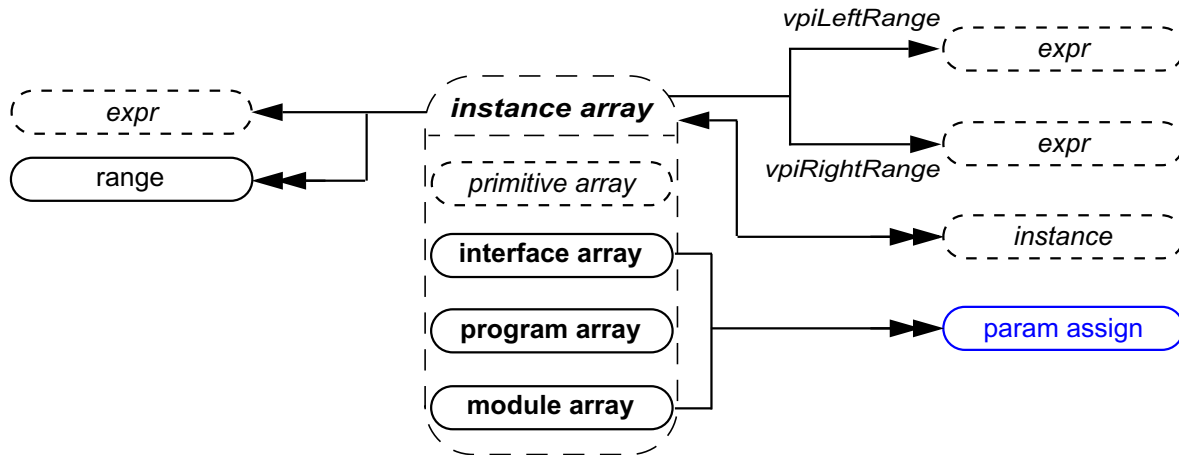

NOTES:

- 1) To obtain all the dimensions of a multidimensional array, the range iterator must be used. Using the **vpiLeftRange/vpiRightRange** properties only returns the last dimension of a multidimensional array.